

Creating Certus-NX-RT Debug with ModelSim

PRODUCT NAME	MANUFACTURER PART NUMBER	DEVICE TYPE
Lattice Certus-NX-RT FPGA	UT24C407	RL01

Table 1: Cross Reference of Applicable Products

1.0 Overview

This document details the process of debugging a **Certus-NX-RT** FPGA project using the **Lattice ModelSim**. For the purposes of this document, create a project named **counter_sim_debug** and configure **ModelSim** to include all the source modules required for a successful build. Using this template, projects are created using (a) the preferred application source directory structures and (b) the directory structure for the **Lattice Radiant**-supplied files. **Figure 1** shows the counter simulation.

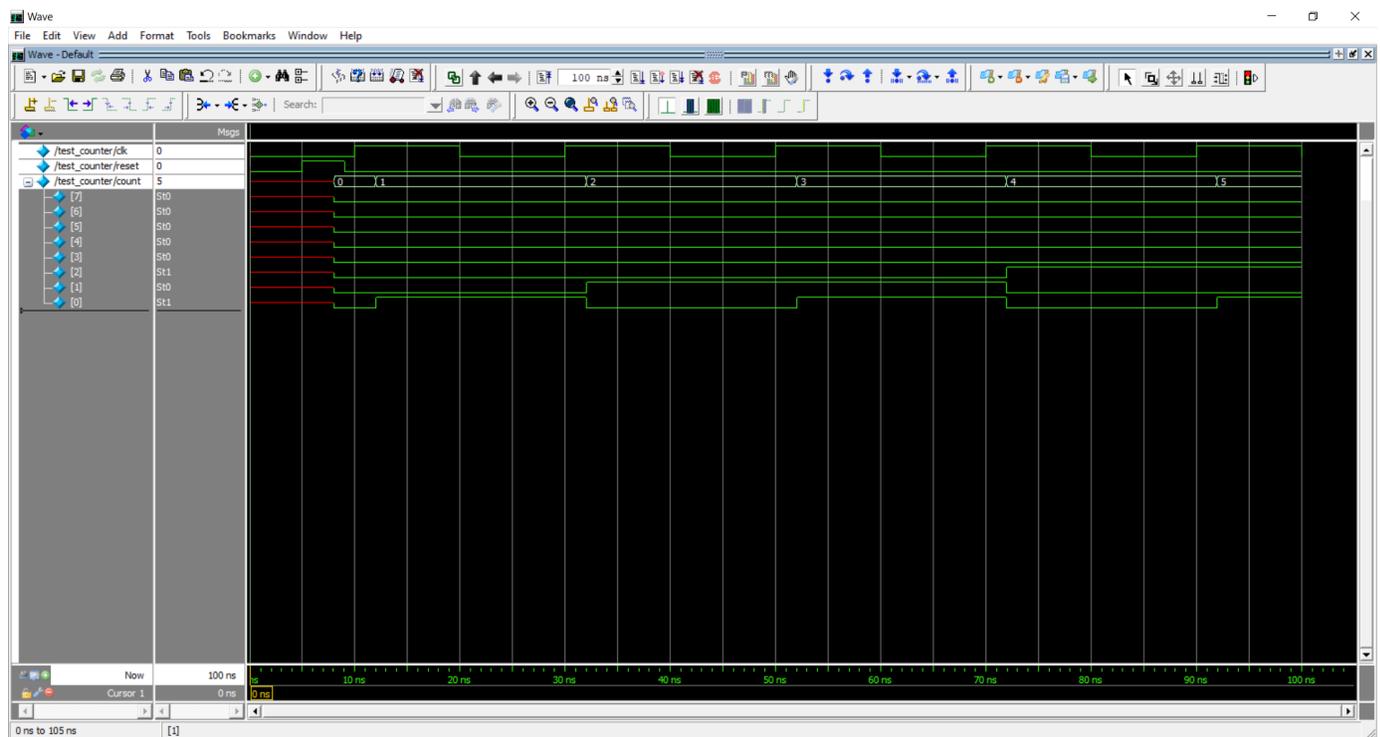


Figure 1: An Example ModelSim Wave

Creating Certus-NX-RT Debug with ModelSim

2.0 Creating a Project

1. Copy **Mentor Graphics** example files from **Lattice Radiant** installation directory:
<installation dir>\modeltech\examples\tutorials\verilog\basicSimulation

To:

<project dir>\Lattice\applications

2. Launch **Lattice ModelSim** 
3. Click **Jumpstart** to create a project, see **Figure 2**.

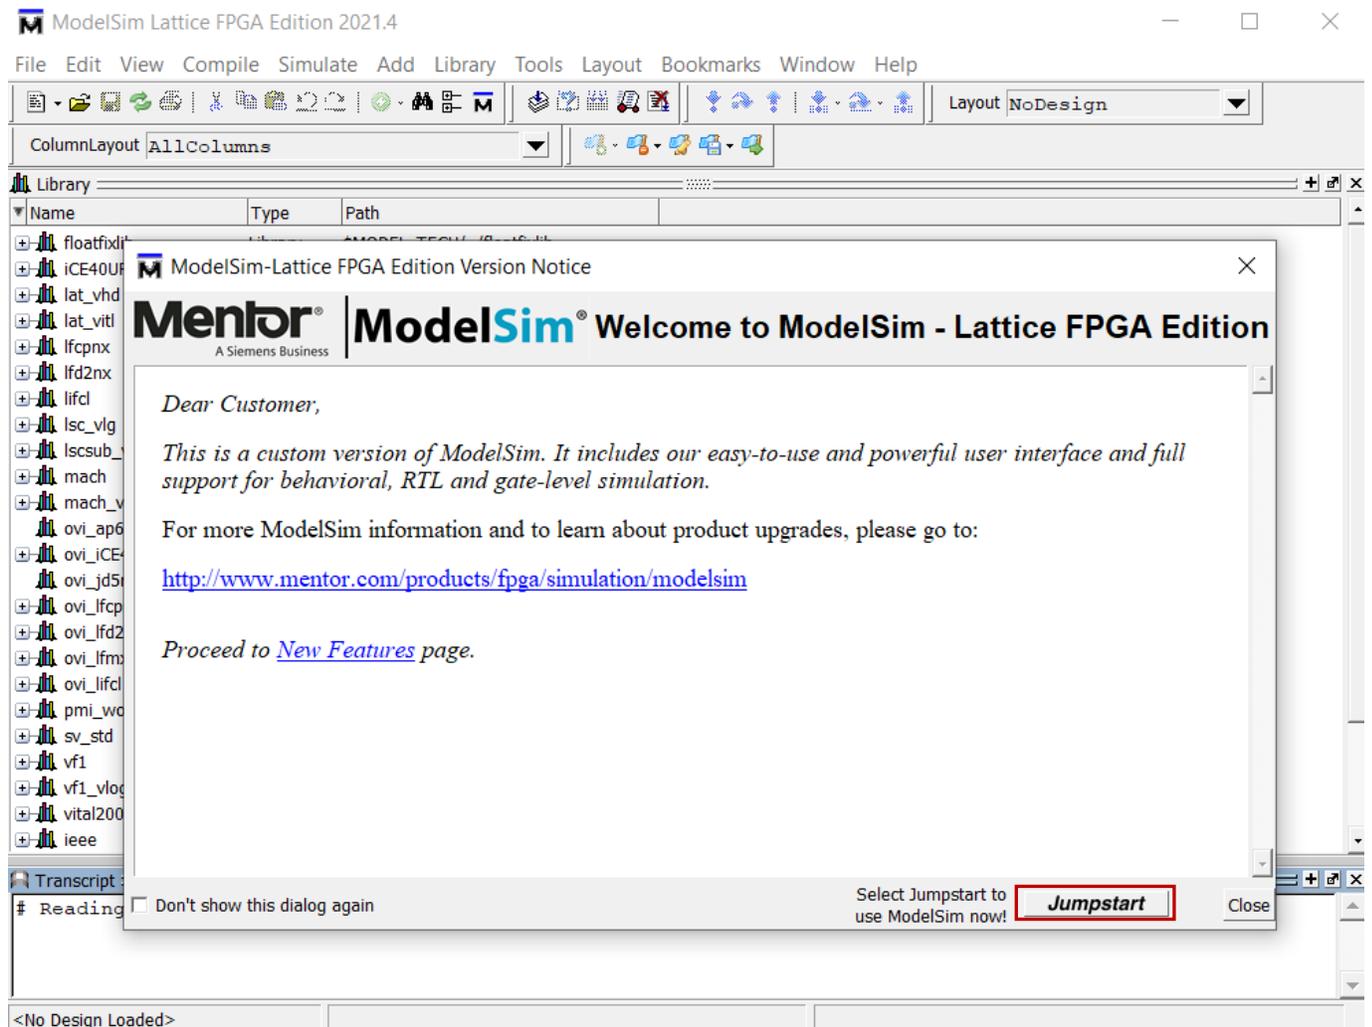


Figure 2: ModelSim-Lattice Project Creation

Creating Certus-NX-RT Debug with ModelSim

- Specify the project name as **counter_sim_debug**, navigate to the **Project Location** of your choice and click **OK**, see **Figure 3**.

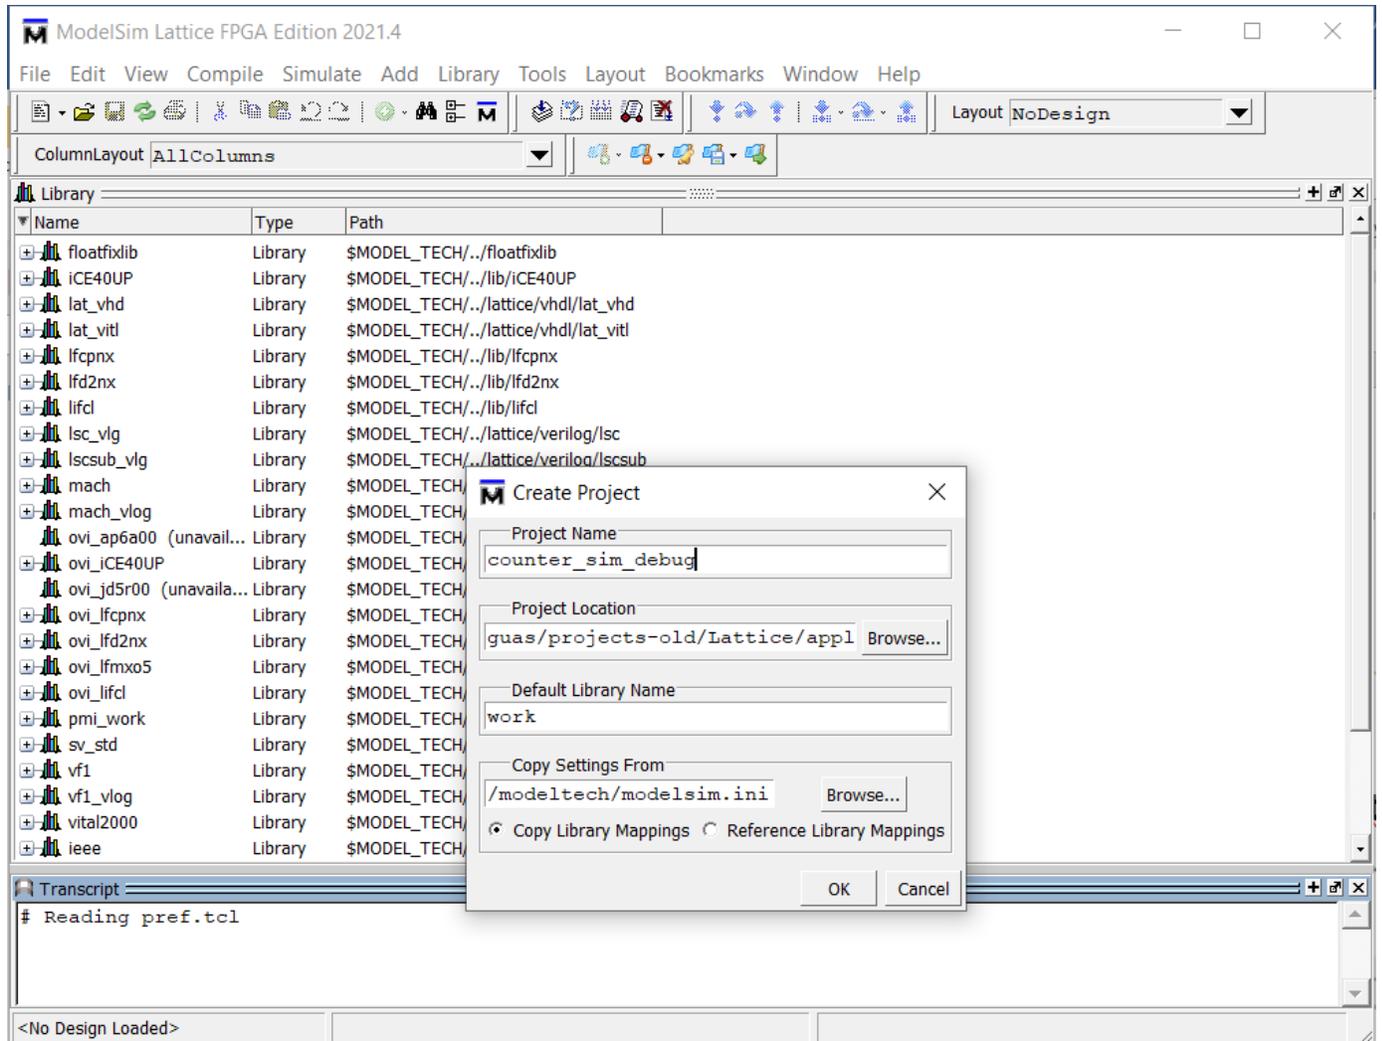


Figure 3: Naming the Project

Creating Certus-NX-RT Debug with ModelSim

5. Click **Add Existing File** and add **counter.v** and **tcounter.v** from <project dir>\Lattice\basicSimulation, see **Figure 4**.

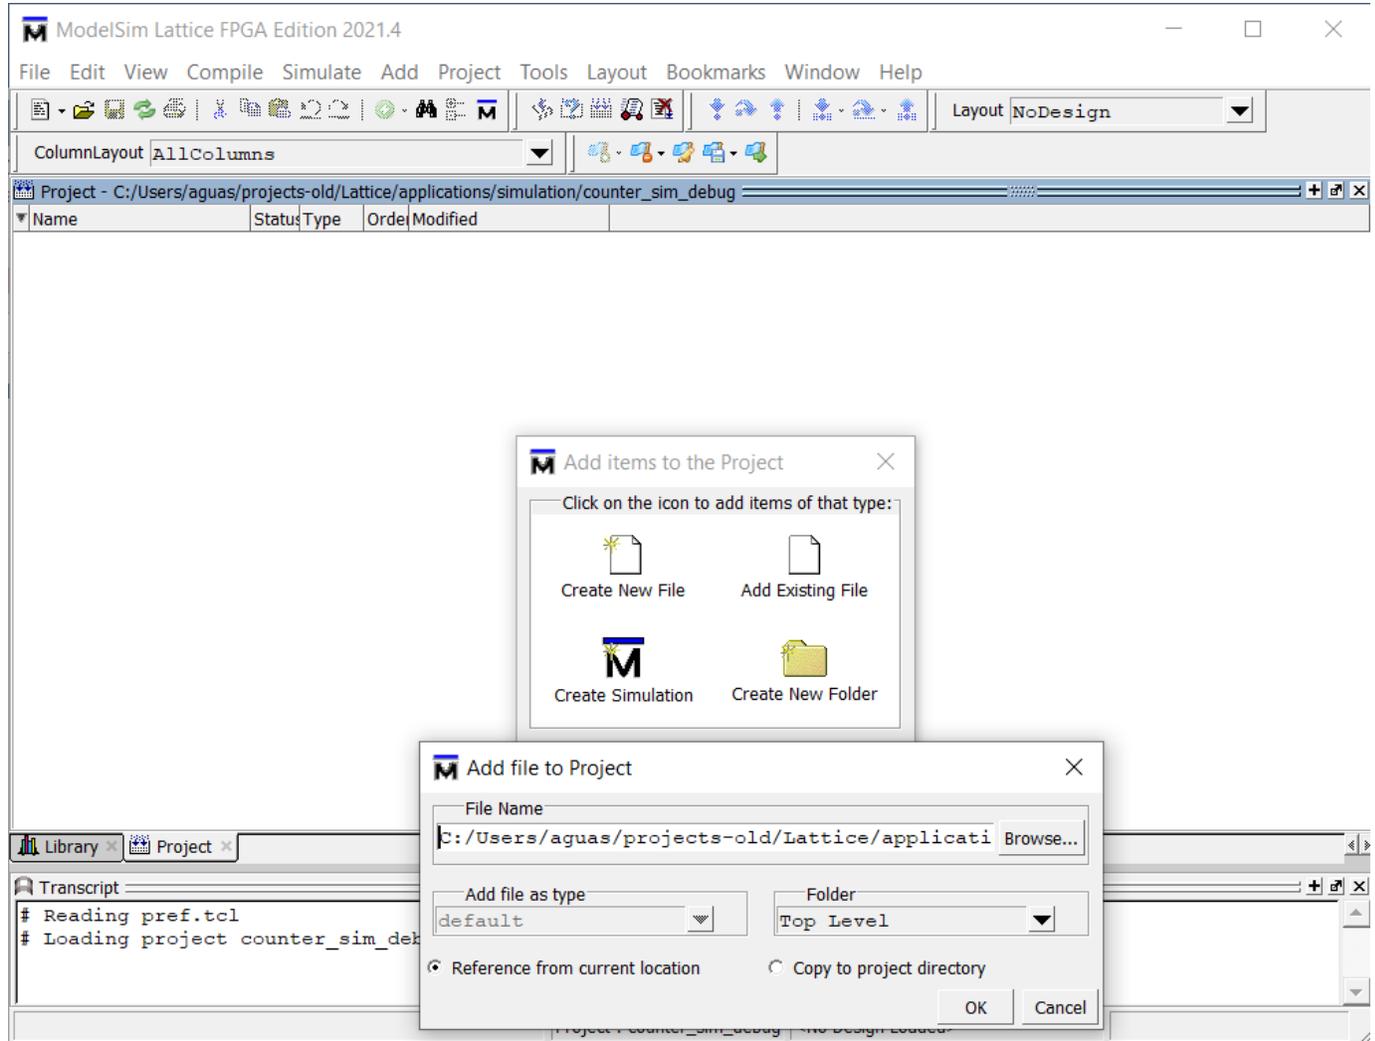


Figure 4: Adding Files to the Project

Creating Certus-NX-RT Debug with ModelSim

6. From the top menu, select **Compile > Compile All** to compile **tcounter.v** and **counter.v**, see **Figure 5**.

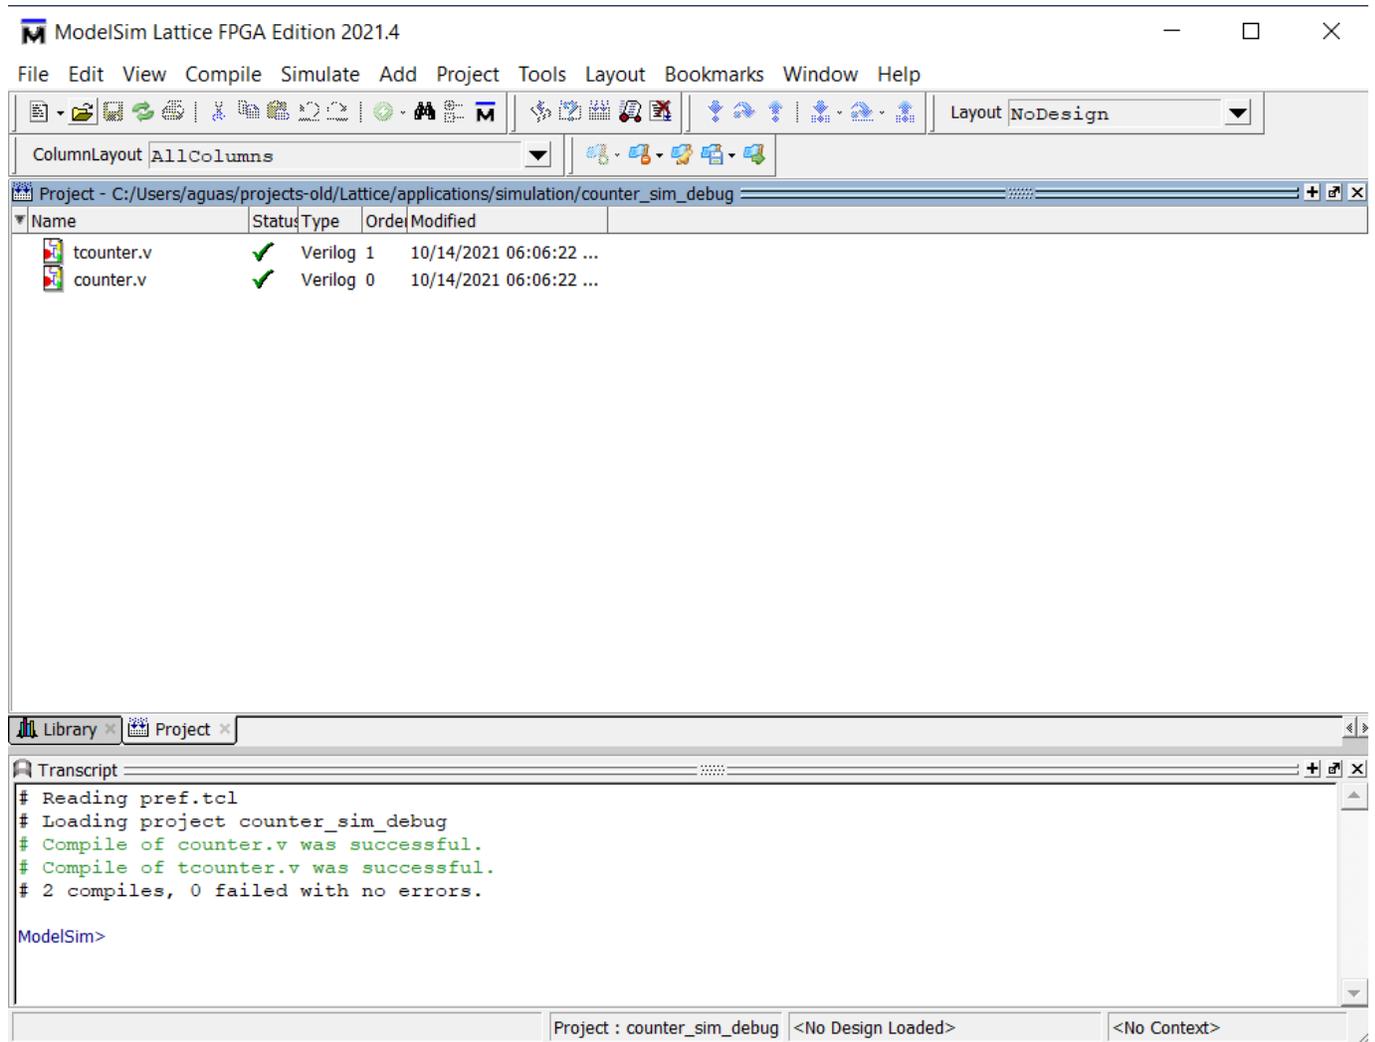


Figure 5: Compiling the Project

Creating Certus-NX-RT Debug with ModelSim

7. Form the top menu, select **Simulate > Start Simulation...** and select **test_counter.v** in the work library and click **OK**, see **Figure 6**.

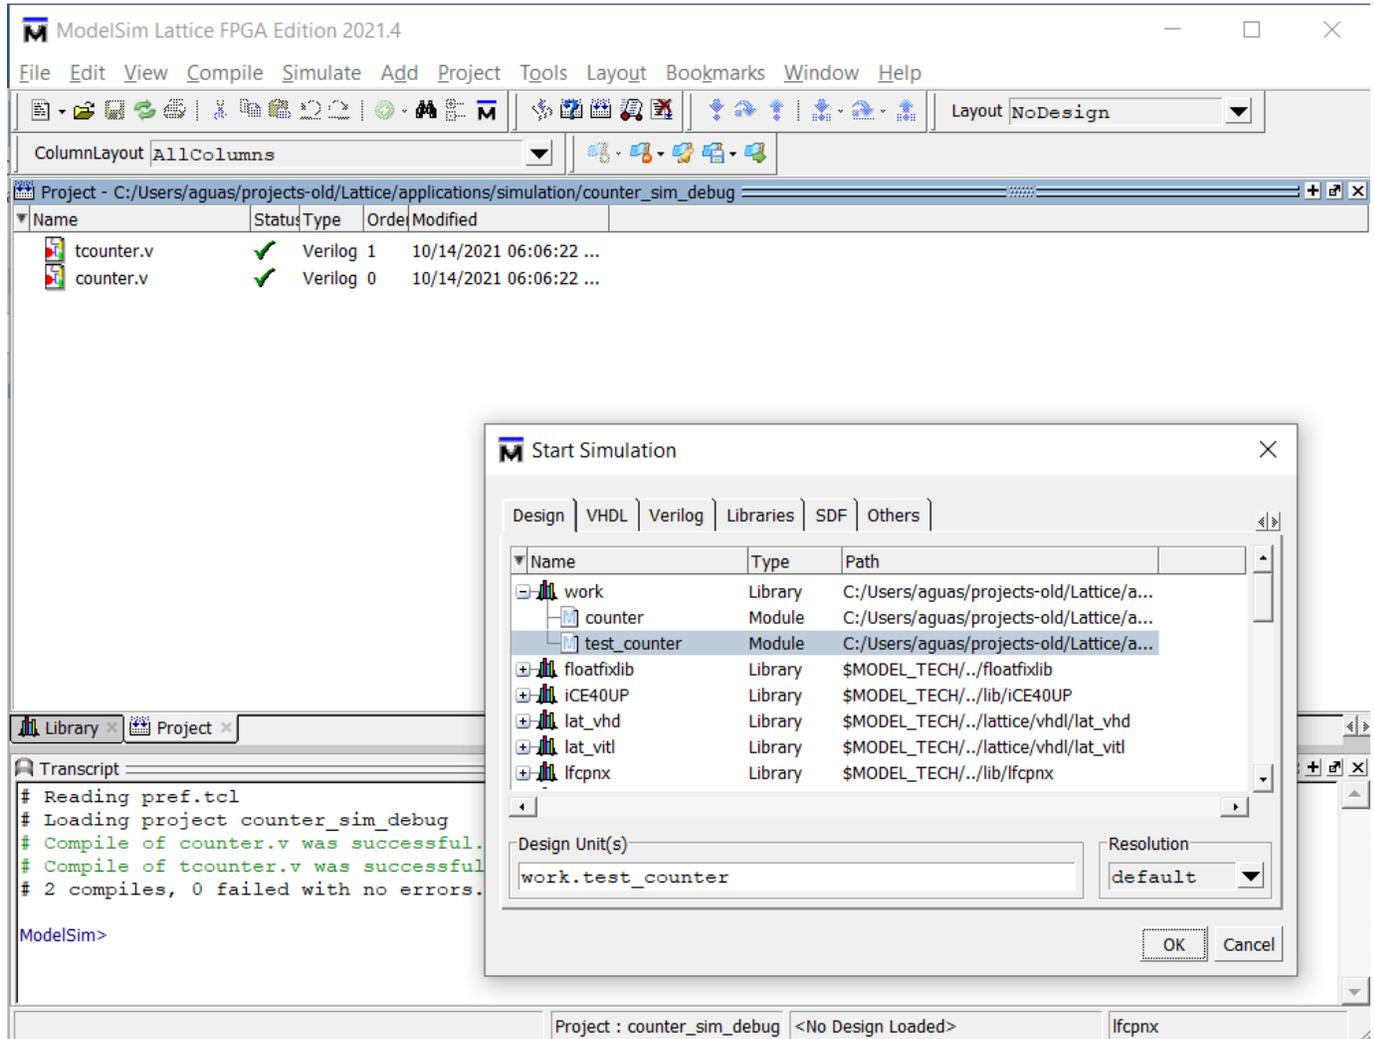


Figure 6: Starting a Simulation

Creating Certus-NX-RT Debug with ModelSim

3.0 Running the Simulation

3.1 Simulating Signals

- From the **Objects** window, choose the top-level signals and drag them over to the **Wave** window. **Run** for 100 nanoseconds and the **Wave** window will display the timing diagram of the signals. Click **Zoom Full** to see the full picture, see **Figure 7**.

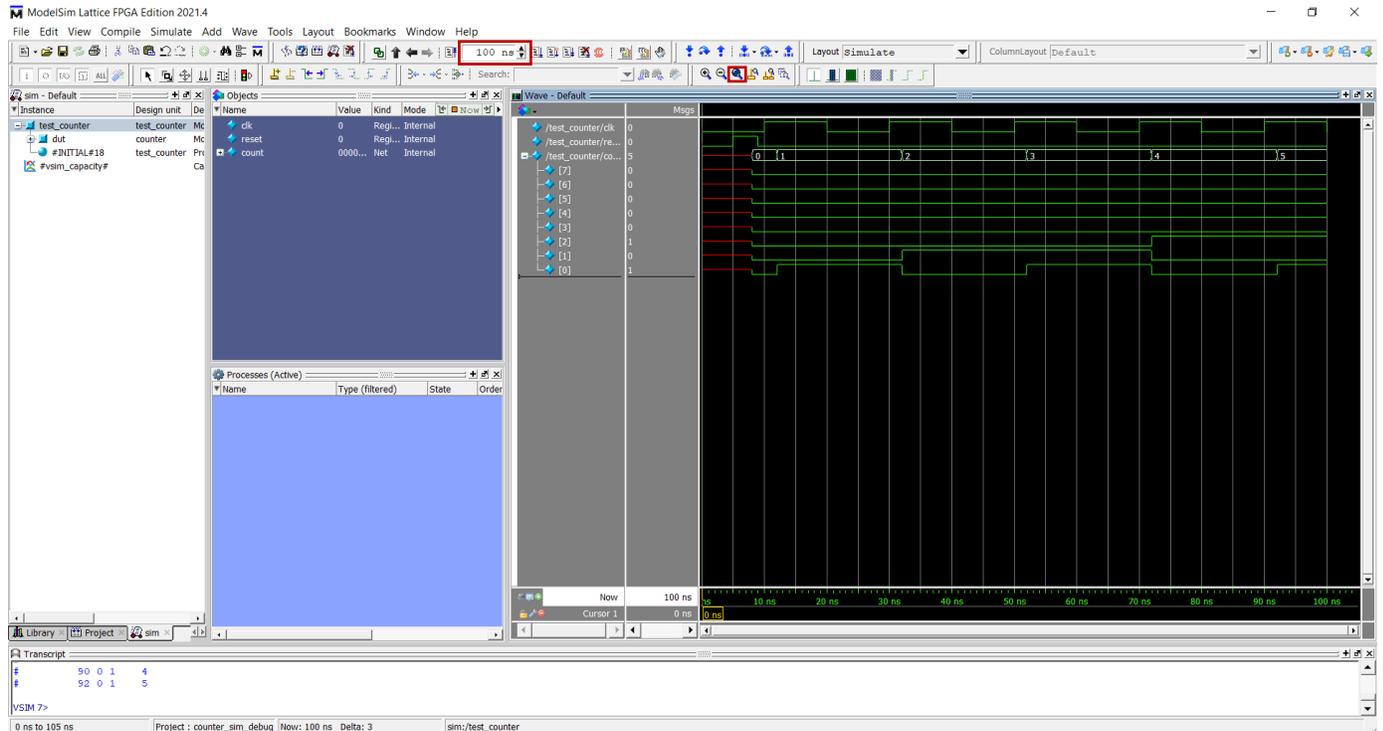


Figure 7: Zooming on the ModelSim Waveform

Creating Certus-NX-RT Debug with ModelSim

4.0 Debugging HDL Code

9. In the Transcript window, enter:
edit counter.v

10. The **counter.v** file opens next to or over the **Wave** window, see **Figure 8**.

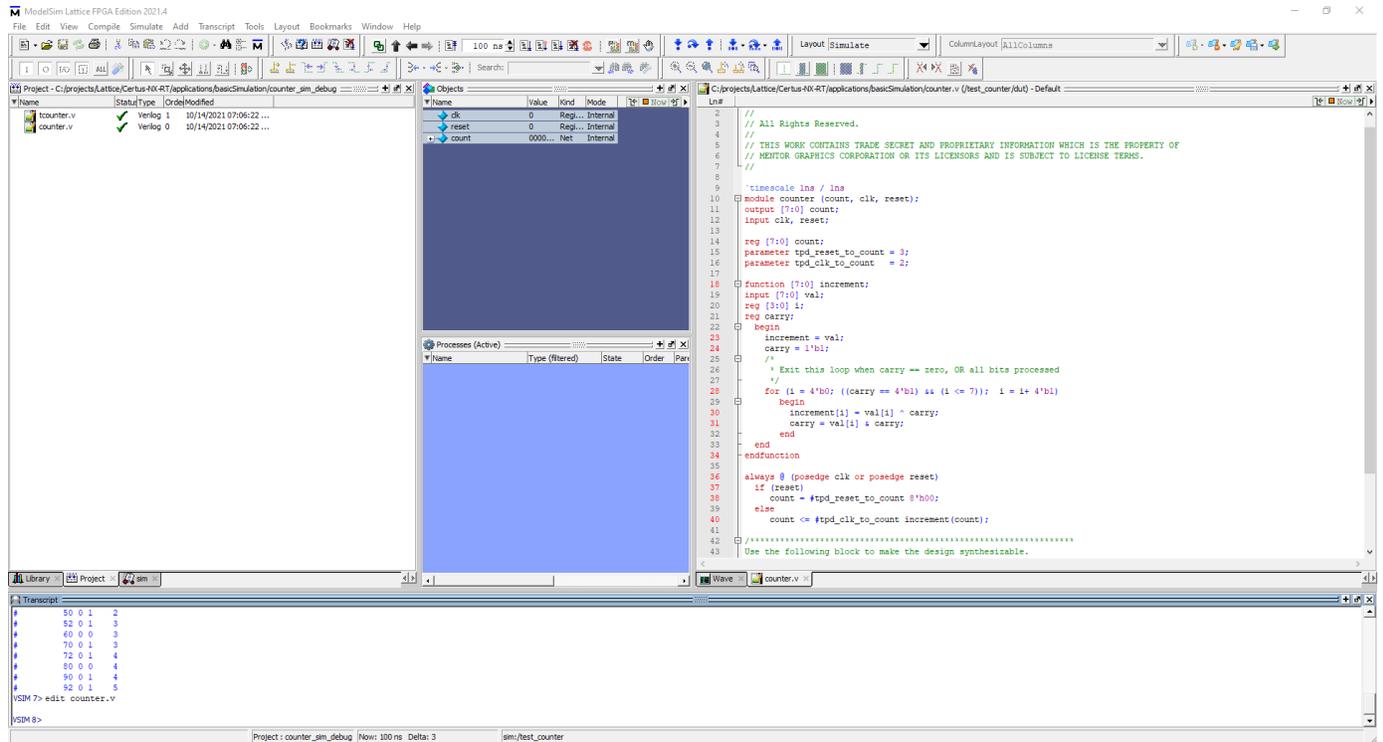


Figure 8: Debugging HDL Code

Creating Certus-NX-RT Debug with ModelSim

11. **ModelSim** allows to debug the **HDL** code with break points and stepping through the code. Double click on line 40 or right-click on it and select **Set Breakpoint**; the debugger sets a breakpoint at line 40, see **Figure 9**.

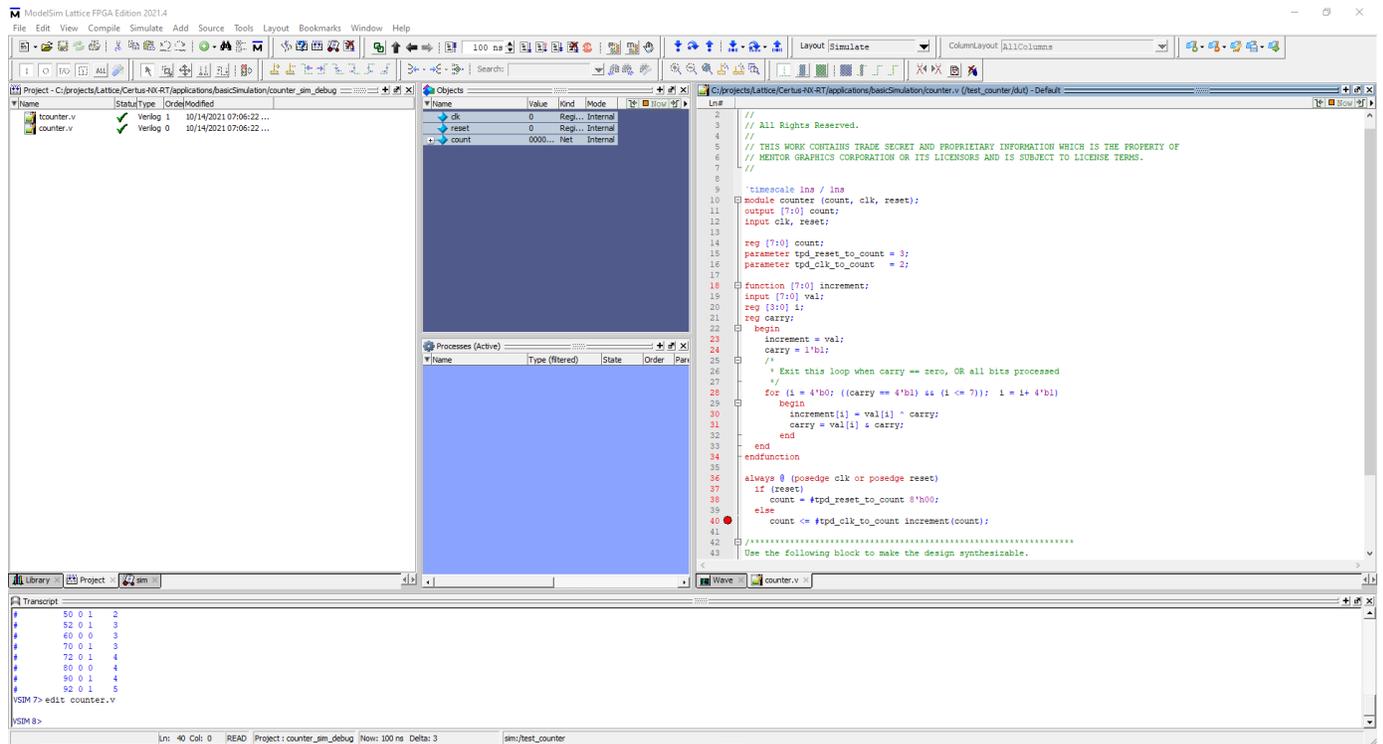
 


Figure 9: Setting a Breakpoint

Creating Certus-NX-RT Debug with ModelSim

12. Run for 100ns  and the debugger will stop at line 40; signal values can be seen in the **Objects** window. As with any other **IDE** running **C** code, you can **Step Into** , **Step Over** , and **Step Out** , see **Figure 10**.

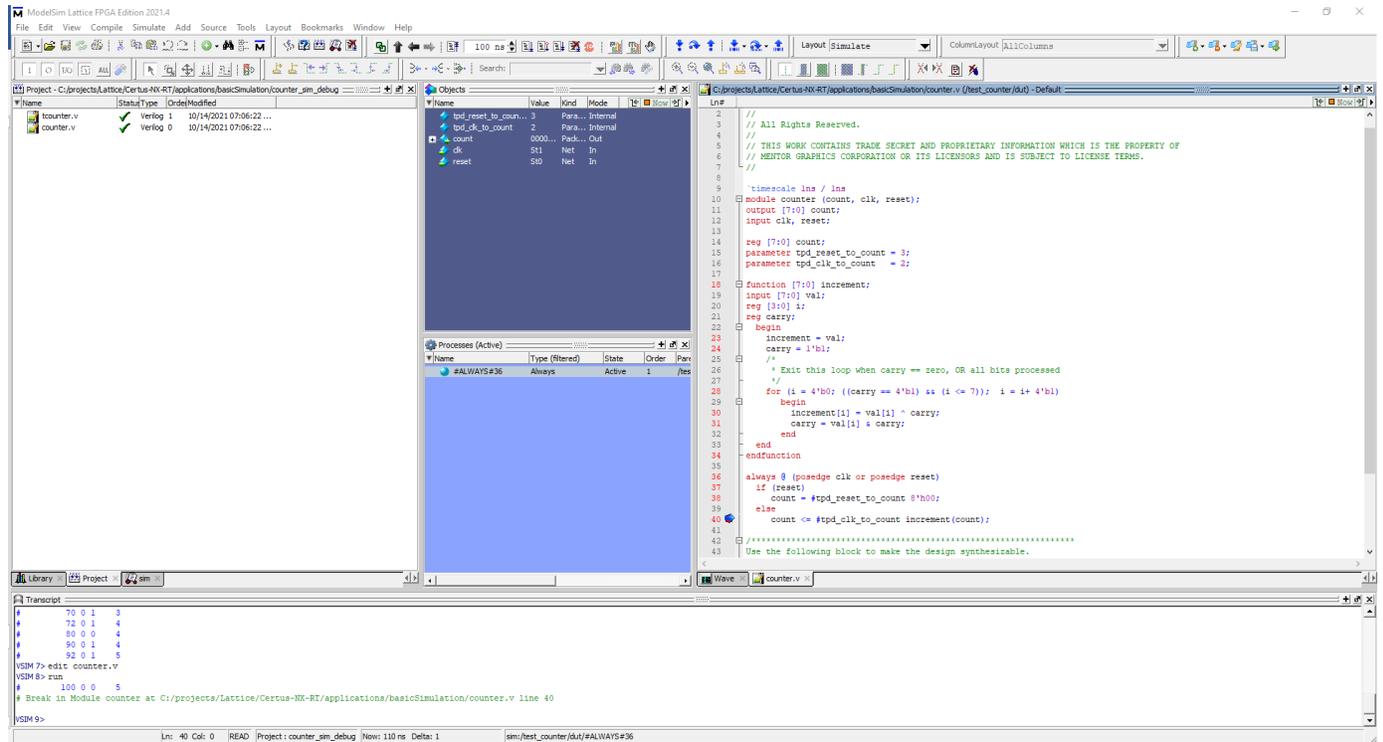


Figure 10: Stepping Around a Breakpoint

Creating Certus-NX-RT Debug with ModelSim

5.0 REVISION HISTORY

Date	Rev. #	Author	Change Description
3/18/2022	1.0.0	JA	Initial Release.
4/21/23	1.0.1	JB	Document reformatted to match Frontgrade template.

The following United States (U.S.) Department of Commerce statement shall be applicable if these commodities, technology, or software are exported from the U.S.: These commodities, technology, or software were exported from the United States in accordance with the Export Administration Regulations. Diversion contrary to U.S. law is prohibited.

Frontgrade Colorado Springs LLC (Frontgrade) reserves the right to make changes to any products and services described herein at any time without notice. Consult an authorized sales representative to verify that the information in this data sheet is current before using this product. The company does not assume any responsibility or liability arising out of the application or use of any product or service described herein, except as expressly agreed to in writing; nor does the purchase, lease, or use of a product or service convey a license under any patent rights, copyrights, trademark rights, or any other of the intellectual rights of the company or of third parties.